 
 


Setting up your oxygen cylinder

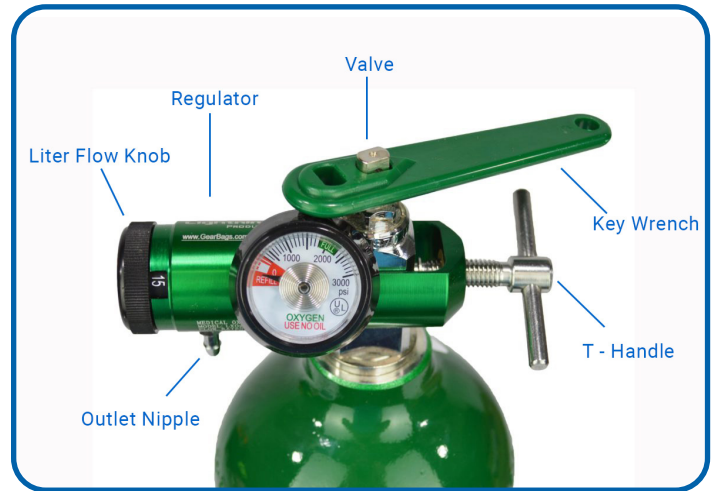

1

If valve and regulator appear clean, remove safety tab from cylinder.

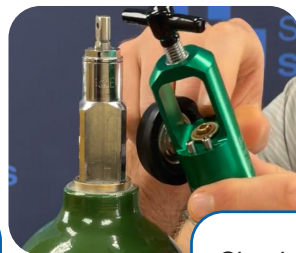

2

Check for washer in regulator. Be sure it is not damaged.



3

Slide regulator over the valve. Line up the 2 pins on regulator with the holes on valve.



4

Hand-tighten the T-handle by turning clockwise




5

Use the key wrench to open valve slowly, by turning one half turn counter-clockwise.



6

Attach the oxygen tubing to the outlet nipple on the regulator.

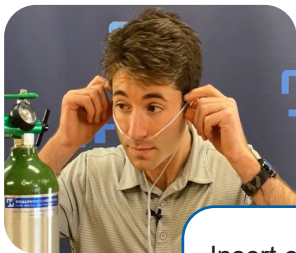

7

Insert cannula into nostrils. Loop tubing over ears.



8

Turn the liter flow knob to prescribed setting.

Replacing an Oxygen Cylinder

- When the regulator gauge reads "REFILL," it is time to replace cylinders.
- Close cylinder valve by turning clockwise with the key wrench.
- Loosen the regulator at the T-handle.
- Remove the regulator by lifting over the cylinder valve.
- Make sure the washer remains with the regulator.

Install a new cylinder using steps 1-8, above.